



Firmware update SM15K-series

Release notes

Before updating the firmware, always consult the release notes.

For an overview of all the changes, see the firmware release note.

[Products > SM15K > Downloads > Firmware > Release notes](#).

Need to upgrade first?

Attention! Check whether the current firmware version is P0109 or older (lower than P0109).

- If the current version is P0109 or older, an intermediate upgrade is required. First update the unit to the intermediate firmware version of P0119. This firmware version is included in the available Zip-file of the newest version.
- After upgrading from P0109 to P0119, you can proceed with updating the unit to versions higher than P0119.

How to update an SM15K-series power supply?

When the current firmware version is greater than P0119:

1. Consult the update instructions. Download the latest manual from the website:
[Products > SM15K > Downloads > Manuals > Product Manual SM15K series](#).
2. Go to the product manual and follow the instructions in chapter 7.4, on pages 24 and 25.
2. Download the latest firmware update from the website:
[Products > SM15K > Downloads > Firmware > Firmware update SM15K series](#).
3. Start the update process